





PMWeb
How to Submit ASI
(Architect's
Supplemental
Instruction)

1: On the PMWeb homepage click on the forms tab.

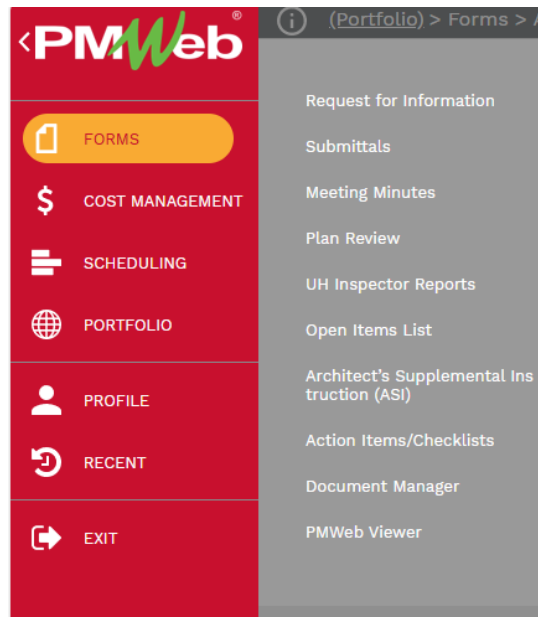

2: Select Architect's Supplemental Instruction.



3: Click on the plus button.



